

DropStopper™

INSTALLATION & BEST RESULTS GUIDE

Humane Bird Deterrence for Vehicle Mirrors and Windows



THANK YOU!

DropStopper was developed through real-world testing to help vehicle owners reduce bird perching, mirror attacks, and concentrated droppings around mirrors, windows, and doors without harming birds.

NEED HELP?

✉ support@dropstopperusa.com

🌐 www.dropstopperusa.com

1 PRODUCT COMPONENTS



Flexible deterrent spans create an unstable landing surface that discourages repeated bird perching.

BASE UNIT (TOP VIEW)



The modular base unit accepts one or two deterrent spans and provides mounting options for suction cups or the optional window seal insert.

SUCTION CUPS (2)



Clear suction cups provide the preferred mounting method for most vehicle installations.

If using suction cups, then install before 2nd span.

2 ASSEMBLY INSTRUCTIONS

1 ALIGN THE SPAN



Align the two span tabs with the matching slots in the base unit, Begin inserting both tabs evenly.

2 SEAT THE SPAN



Press the span downward until tabs are partially seated. Do not force one side completely before the other.

3 FULLY LOCK THE SPAN



Continue pressing until both tabs are fully seated in the base. Verify the span is secure and evenly installed.

4 INSTALL THE SECOND SPAN



Repeat Steps 1 – 3 for the second deterrent span.

5 VERIFY FINAL ASSEMBLY

Recommended field-tested configuration:

- One span at the 12 o'clock position
- One span at the 4 o'clock position

This arrangement provides best balance of perch instability and reflection disruption. If birds adapt, reposition the spans to alternate slots to vary the deterrent pattern.



SIDE VIEW



3 MOUNTING OPTIONS


OPTION A – SUCTION CUP INSTALLATION (RECOMMENDED)



1. Clean the mounting surface.



2. Dry the surface completely.

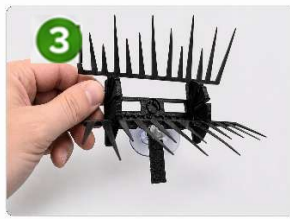

3. Insert suction cups into the base unit.



4. Firmly press against the vehicle surface.



5. Verify the assembly is securely attached.

RECOMMENDED LOCATIONS



Side Mirrors



Front Side Windows



Rear Side Windows



Additional Reflection-Prone Areas

OPTION B – WINDOW SEAL INSERT



1. Carefully slide the insert between the window seal and weather seal.



2. Verify the seal remains properly seated.



3. Ensure the product is secure.



IMPORTANT

Do not force the insert if excessive seal deformation occurs.

If seal distortion is observed, use suction cup mounting instead.

4 COVERAGE RECOMMENDATIONS

LIGHT BIRD ACTIVITY

Recommended Coverage:



- Driver-side mirror
- Passenger-side mirror

MODERATE BIRD ACTIVITY

Recommended Coverage:



- Both mirrors
- Front side windows

PERSISTENT TERRITORIAL BIRDS

Recommended Coverage:



- Mirrors
- Front side windows
- Rear side windows
- Additional reflection-prone locations

Some birds may relocate to nearby reflective surfaces when access to their preferred landing area is disrupted.

5 UNDERSTANDING BIRD BEHAVIOR

Birds often mistake reflections for rival birds. This territorial behavior can result in:

- Repeated mirror attacks
- Window pecking
- Persistent perching
- Concentrated droppings

Results vary depending on:

- Bird species
- Vehicle color
- Reflection intensity
- Territorial history
- Seasonal behavior

Some birds require several days or weeks of consistent deterrence before the behavior is fully disrupted.

6 MAINTENANCE

PERIODICAL INSPECT

- Spans
- Base Units
- Suction Cups
- Mounting Locations



CLEANING

Use mild soap and water. Do not use harsh solvents. Allow all components to dry before reinstalling.



7 NEED ASSISTANCE?

- support@dropstopperusa.com
- www.dropstopperusa.com



Scan to access website for installation video and FAQ's

WE LIKE BIRDS. HATE THE DROP!™